

 


USER MANUAL
FOR
RITZY



6, Sarat Chatterjee road
Kolkata - 700 089, Toll Free No.: 1800 121 0600
Email: customercare@propello.in
www.propello.in
CIN: U74900WB2009PTC137818



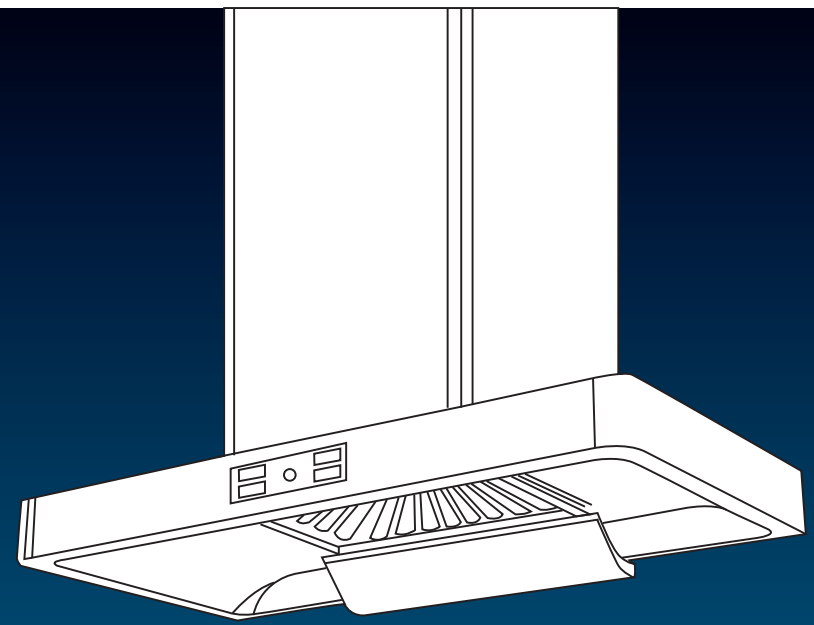

**INSTRUCTION MANUAL
AND WARRANTY CARD**

CONTENT

Notice	02
Installation	02
Notice of Installation	02
Safety Warning	03
Operation	04
Model Description	05

 
1. NOTICE

- 1) Thank you for choosing our Cooker Hood. Please read the instruction manual carefully before use.
- 2) The installation work must be undertaken by a qualified and competent fitter.
- 3) The manufacture disclaims all liability for any damage or injury caused as a result of not following instructions for installation contained in the following text.

The Cooker Hood is used on 220~240V, 50Hz.


2. INSTALLATION

- 1) The Cooker Hood should be placed at a distance of 65~75cm (26~30inch) from the cooking surface for the best effect. See Pic 1.
- 2) Install the Hook on a suitable place once the installation height is fixed, and keep it in line. The fixed position of the inside chimney bracket is the place of chimney.
- 3) Put the Cooker Hood on the hook.

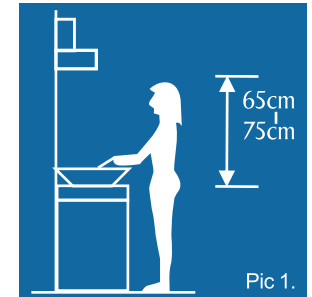

3. NOTICE OF INSTALLATION

  
- 1) Before installation, please ensure the area is clean to avoid suction of the remaining bits of broken wood and dust.
- 2) It cannot share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube.
- 3) The bending of ventilation tube should be $\geq 120^{\circ}\text{C}$, parallel or above the start point and should be connected to the external wall.
- 4) After installation, make sure that the extractor is level to avoid grease collection at one end.

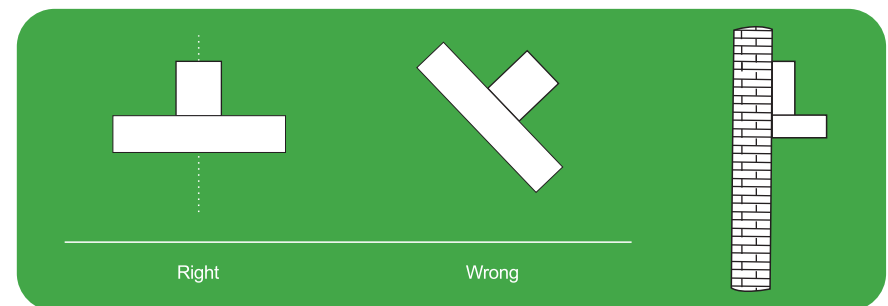





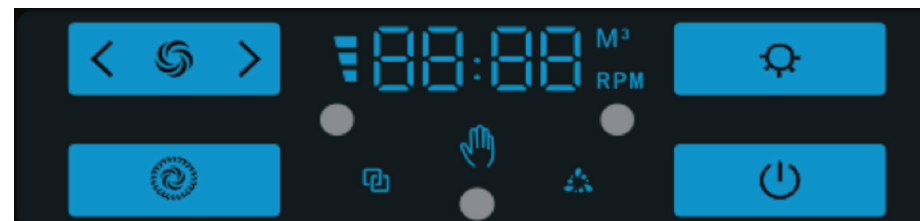

4. SAFETY WARNING

- ◇ Keep your children from using the Cooker Hood.
- ◇ Your Cooker Hood is for domestic use only, not suitable for barbecue, roast shop and other commercial use.
- ◇ Any installation work must be carried out by a qualified electrician or competent person.
- ◇ The Cook Hood and its filter should be cleaned regularly in order to keep in good working order.
- ◇ Before cleaning, always ensure that you have switched your Cooker hood off.
- ◇ Clean the Cooker Hood according to the instruction manual and keep the Cooker Hood from the danger of burning.
- ◇ No fire for drying your Cooker Hood.
- ◇ If there is any fault with your Range Hood, please call the service department appointed by agent for servicing.
- ◇ Please keep the room draughty when your Cooker Hood and gas hob are working.
- ◇ Do not exhaust the gas from Cooker Hood through the same heated flue which is for the gas from gas hob and other kitchen appliances.
- ◇ Before installation and usage, read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on your Cooker Hood are exactly the same as voltage (V) and the frequency (Hz) in your home.
- ◇ In order to get the most out of your Cooker Hood, please read the instruction manual before installing & using, and keep it in a safe place.

5. OPERATION



-  **Power key:** Touching once will activate the chimney and all the key lights will be on and it will be on standby mode. For switching off, touch the power button once in standby mode. When machine is in power off mode, touch power key for 3 seconds, hand sensor function will turn on and screen will display 'ON'. Touch power key for 3 seconds again, hand sensor function will turn off and screen will display 'OFF'. When motor is in ON mode, touch the power key and it will go in switch OFF mode with a delay timer of 1 minute. For instant switch OFF, touch power key once again.
-  **To use this function,** Put hand in front of icon for 1 second, motor will start at top speed and light will be switched ON. For switching the chimney off put hand at front of icon when chimney is in running mode.
-  **Lighting Key :** Touch the key once and the light will be on. To switch off the light the key needs to be touched once in ON position.
-  **Auto clean Key:** In standby mode, touch auto clean key for 2 seconds to start heat auto clean function, the icon will start flashing and stop automatically after 9 minutes once the process is complete. If the heat clean function needs to be interrupted then press the icon for 2 seconds and it will stop.
-  **Turbo key:** In Power ON mode, touch turbo key and motor will work at Turbo speed and screen will display F10. After 2 seconds the screen will display RPM. To stop press it once again.
-  **In Standby mode** touch this key and motor will start at 8th Speed and screen will display F8, after 2 seconds screen will display RPM. Touch to adjust speed from speed 1 to 8 as per choice.



MODEL NAME - RITZY

SIZE	90 CM
FILTER TYPE	UNIQUE INVERTED FILTER WITH OIL COLLECTOR
BODY TYPE & COLOR	GLASS & SS
AUTO CLEAN TECHNOLOGY	DRY AUTO CLEAN
SWITCH TYPE	INTELLIGENT TOUCHLESS CONTROL
AIR OUTLET	160 MM
MOTOR WATTAGE	190 WATTS BRUSHLESS DC MOTOR
SPEED	EIGHT + TURBO SPEED
LIGHT	LED 3W
SUCTION	1600M3/hr



Warranty Card

Dear Customer.

Congratulations! You have become a proud owner of Propello Kitchen hood / Appliances, the model mentioned below is covered under warranty against all manufacturing defects for a period of 12 months (the motor carries a Lifetime warranty) from the date of purchases subject to the conditions mentioned below ,

Model:

SI No.:

Bill No.:

Purchasing Dealer's Name with signature & seal:

Warranty Terms & Conditions

The goods are warranted against all manufacturing defects for a period of 12 months (the motor carries a lifetime warranty) from the date of purchase subject to the following conditions.

- A. The warranty does not cover charcoal filter, bulbs, glass parts and such other items that are subject to normal wear and tear due to operations
- B. Defective cooker hood with valid warranty card and original bill to be produced to the authorized service franchise or service dealer by the customer's own cost during working hours or upon visit.
- C. This warranty does not cover defects as result of accident/ damage due to transit or misuse.
- D. This warranty is not applicable if the damage is a result of attractions, unauthorized repairs, tampering or alteration of any part, unauthorized installation or damages caused as a result of natural calamity, nots or any unnatural circumstances and any kind of electrical malfunction including high voltage supply.
- E. This warranty is valid only when it bears the signature and stamp of the authorized dealer
- F. The defective item or component will be replaced / repaired at the sole discretion of Propello Innovations Pvt. Ltd. and the replaced parts will be the property of Propello Innovations Pvt Ltd.
- G. This product is intended for domestic use and not for commercial use.
- H. All disputes are subject to Kolkata jurisdiction

Customer's Signature

